



MODEL FL-200

Inline Thermal Check Valve

INSTRUCTION NO. IOM-FL-200

REFERENCE DATA:

FL-200 Series Assembly Drawing No. A88-60200-00.

INSTALLATION:

1. Clean the piping of all foreign material including chips, welding scale, oil, grease and dirt before installing the thermal trip valve.
2. In placing thread sealant on pipe ends prior to engagement, ensure that excess material is removed and not allowed to enter the thermal trip valve upon startup.
3. Flow Direction: Install so the flow direction matches the flow arrow on the body of the thermal trip valve.


PRINCIPLE OF OPERATION:

1. When the valve is installed it is open.
2. This valve will stay open until it is actuated by the fusible link.
3. This will cause the valve to close.

MAINTENANCE:

1. All valves are leak tested at the factory at 200 PSIG and should be externally leak tight after installation. If after prolonged service the valve should leak externally, it is recommended that the valve be replaced or sent to the factory for rebuilding.

THERMAL CHECK VALVE FL-200 SERIES

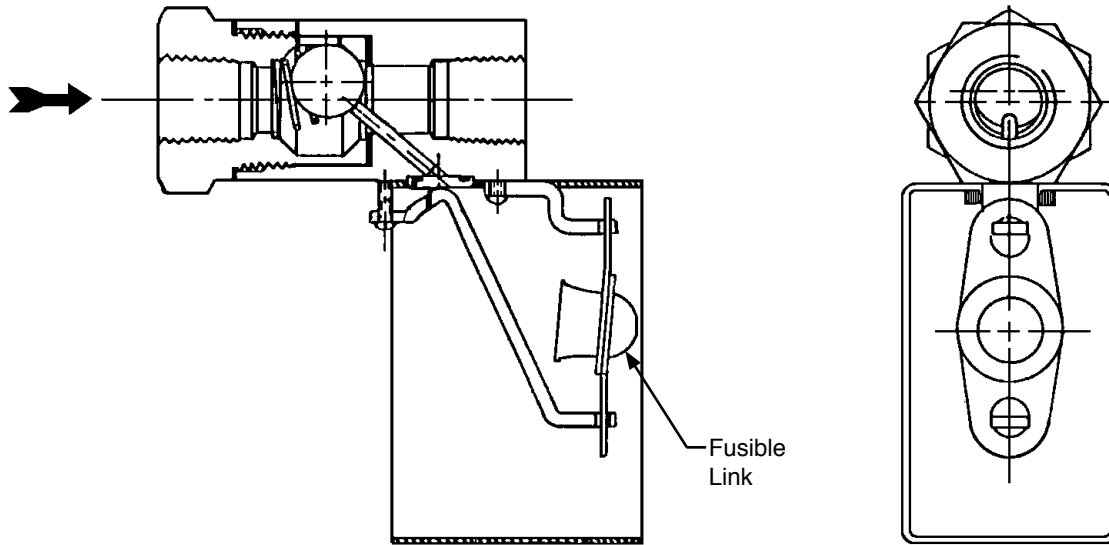

NOTES:

1. Maximum pressure rating 130 psig (896 kPa) WOG.
2. No changes shall be made to parts, material or manufacturing process without prior approval by Factory Mutual Research Corporation.
3. All valves to be assembled, inspected and tested in strict accordance with Cashco Standard S-1549.
4. Link shown 17° out of position.